



**SCHEMA DI MONTAGGIO /  
ASSEMBLY INSTRUCTIONS /  
SCHÉMA D'ASSEMBLAGE /  
ESQUEMA DE MONTAJE**

**FADE CHAIR**

gambe in metallo verniciato

painted metal legs

pieds en métal laqué

patas de metal pintado

# FADE CHAIR

Elementi / Components / Éléments / Elementos:



**(A)**

4x

Vite M6 x 30 mm

M6 x 30 mm screw

Vis M6 x 30 mm

Tornillos M6 x 30 mm



**(B)**

1x

Chiave a brugola da 4 mm.

Allen wrench 4 mm.

Clé Allen de 4 mm.

Llave Allen de 4 mm.


## 1° STEP / ÉTAPE / FASE

Ribaltare la scocca dell'articolo.

*Turn the article's shell upside down.*

*Retourner la coque de l'article.*

*Voltear la carcasa del artículo.*

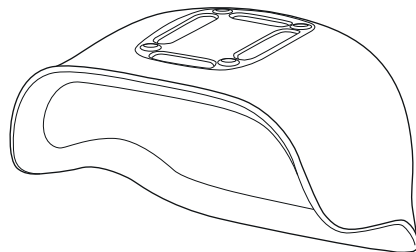

## 2° STEP / ÉTAPE / FASE

Appoggiare le gambe sul fondo della scocca dell'articolo.

*Place the legs on the bottom of the body of the article.*

*Poser le piètement sur le dessous de la coque de l'article.*

*Apoyar las patas en el fondo de la carcasa del artículo.*


### ○ **Attenzione / Attention / Atención:**

*Il lato più inclinato va posizionato in corrispondenza dello schienale.*

*Position the more sloping side at the backrest.*

*Poser le piètement sur le dessous de la coque de l'article.*

*El lado más inclinado debe colocarse orientado hacia el respaldo.*

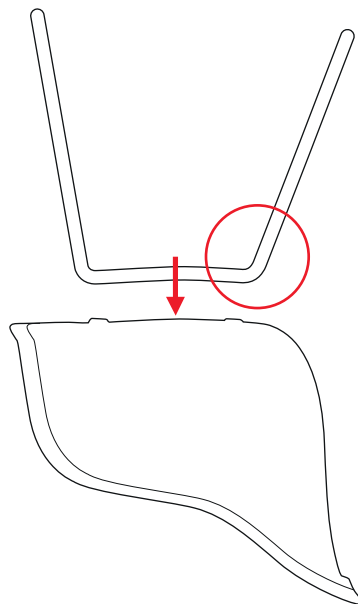


## 3° STEP / ÉTAPE / FASE

Fissare le gambe alla scocca con le 4 viti in dotazione (A), con l'ausilio della chiave a brugola (B).

*Fix the legs to the bodyshell using the 4 screws (A) (included), using an Allen key (B).*

*À l'aide d'une clé Allen (B), fixer le piètement à la coque avec les 4 vis (A) fournies.*

*Fijar las patas a la carcasa con los 4 tornillos de serie (A), con la ayuda de una llave Allen (B).*

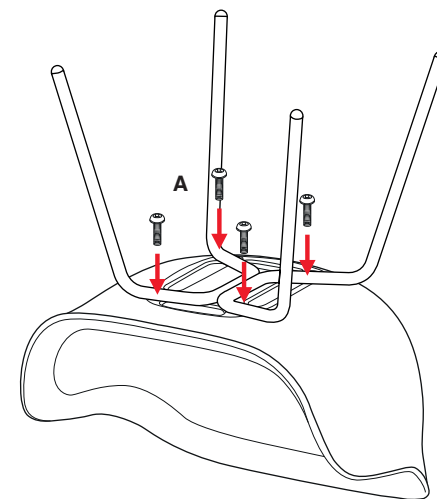

## 4° STEP / ÉTAPE / FASE

Capovolgere la sedia.

*Return the chair to the right way up.*

*Retourner ensuite la chaise.*

*Luego voltear la silla.*

